

Angle Pex-B Radiator Valve

KAS®



TECHNICAL DATA SHEET

Product Name	Angle Pex-B Radiator Valve
Standard	TS 579
Working Temperature	Max. 120°C
Pressure Class	PN 10
Intended Use	Heating Systems

DIMENSIONS


Code	04.14.309-01
DN	15
D1 (thread)	Rp 1/2"
D2 (thread)	G 1/2"
L1 (max-min)	80,9 - 88,9
L2	51
%	9
SW1	30
SW2	24

MATERIALS


Body	BRASS(CW617N)/(CW614N)
Spindle	BRASS(CW617N)/(CW614N)
Nuts	BRASS(CW617N)/(CW614N)
Tube	BRASS(CW617N)/(CW614N)
Handle	ABS
Seals	NBR/EPDM
Pex Connection	BRASS(CW617N)/(CW614N)

SURFACES FINISH

Body	Nickel-Plated
Nuts	Nickel-Plated
Tube	Nickel-Plated

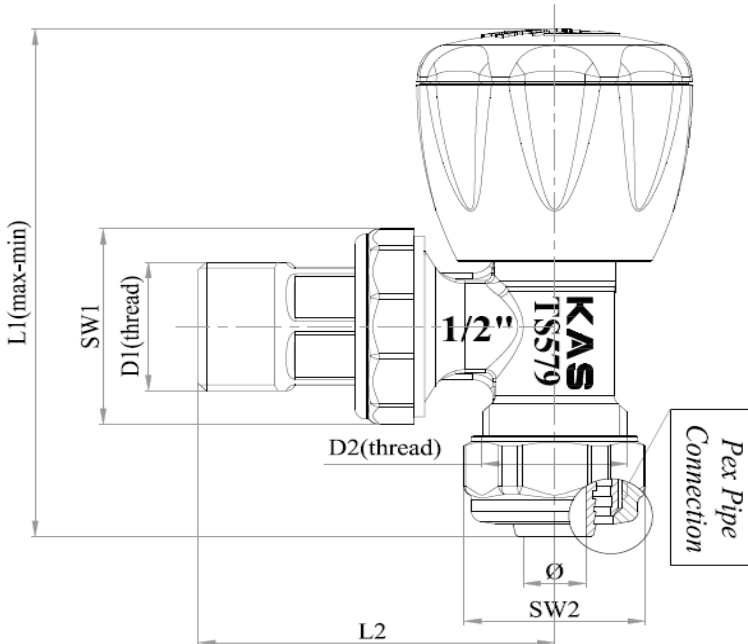

Dimensions are in "millimeter"

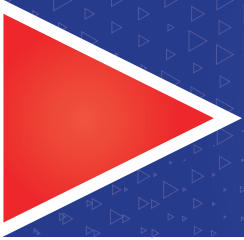

Angle Pex-B Radiator Valve

KAS[®]

INSTALLATION and OPERATING INSTRUCTION

- 1-** Do not unpack the valve until installation to prevent falling of any unwanted substance that may affect the working of valve.
- 2-** Take measures against any possible damage that may occur during transport and shipment.
- 3-** Clean away every unwanted substance in your system before installation.
- 4-** Valve should be off position while installing.
- 5-** Be careful that the thread length of the part that will be installed to the valve will not be too longer or too shorter than the thread length of the valve.
- 6-** While installing, grab the valve by the appropriate tool from the across flats where you'll install it.
- 7-** During installation do not use excessive adhesive or any unsuitable substance.
- 8-** Do not paint the valve. Do not expose the valve with abrasive chemicals.
- 9-** Do not use any other tools for opening or closing the valve and do not remove the cap.
- 10-** In case of any damage or disorder , valve should be changed by authorities.
- 11-** Complying with the installation and usage instruction is compulsory. Otherwise, the product will be out of guarantee.
- 12-** Do not forget to get the document of guarantee. This document is valid only with the related bill.