

# 1/2" 16x2 Int. Thread Mini Brass Ball Valve

# KAS®




## TECHNICAL DATA SHEET

<b>Product Name</b>	1/2" 16x2 Ext. Thread Mini Brass Ball Valve
<b>Working Temperature</b>	-10°C to 100°C
<b>Working Pressure</b>	10 Bar
<b>Intended Use</b>	Air / Water Installation

## DIMENSIONS

<b>Code</b>	05.01.312
<b>DN</b>	15
<b>D</b>	1/2"
<b>SW1</b>	25
<b>SW2</b>	24
<b>L1</b>	53,4
<b>L2</b>	32
<b>H</b>	32,6
<b>Ø</b>	9

Dimensions are in "milimeter"

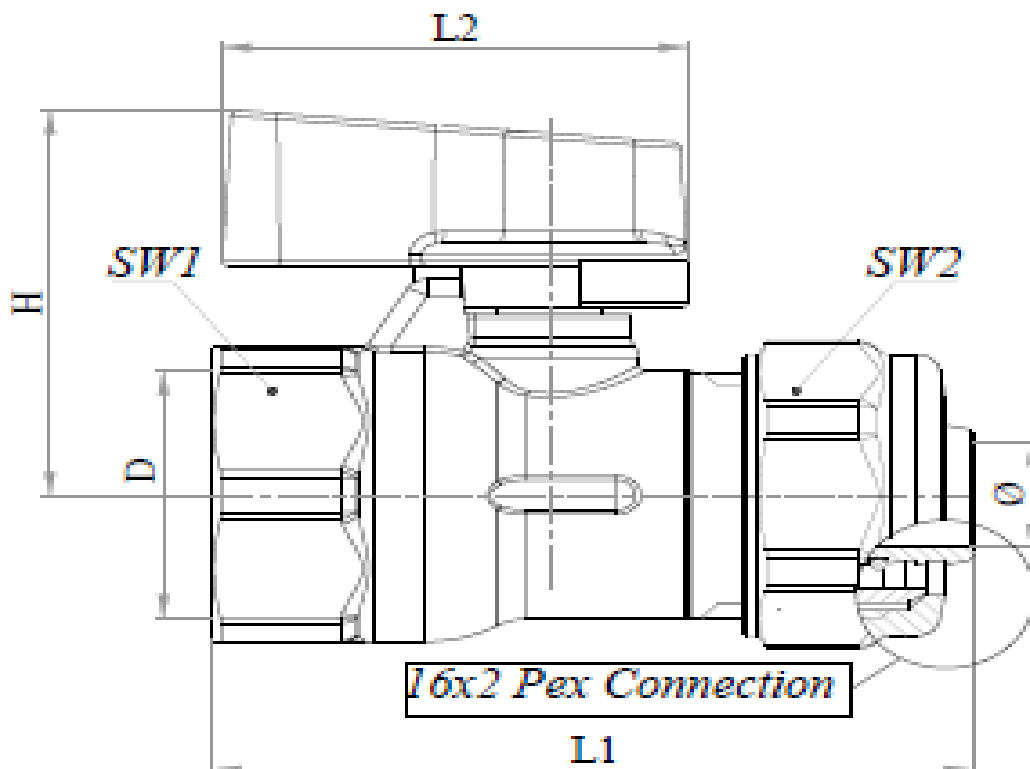

# 1/2" 16x2 Int. Thread Mini Brass Ball Valve

# KAS®

PART NAME	MATERIAL
Body	Brass
Ball Seal	PTFE (Teflon)
Stem	Brass
Stem Seal	NBR (O-Ring)
Ball	Brass
Handle	Plastic

SURFACES FINISH	
Body	Nickel
Stem	-----
Ball	Nickel / Chrome
Handle	Different Color Options

## INSTALLATION and OPERATING INSTRUCTION

- 1- Do not unpack the valve until installation to prevent falling of any unwanted substance that may affect the working of valve.
- 2- Take measures against any possible damage that may occur during transport and shipment.
- 3- Clean away every unwanted substance in your system before installation.
- 4- Valve should be off position while installing.
- 5- Be careful that the thread length of the part that will be installed to the valve will not be too longer or too shorter than the thread length of the valve.
- 6- While installing, grab the valve by the appropriate tool from the across flats where you'll install it.
- 7- During installations do not use excessive adhesive or any unsuitable substance.
- 8- Use the valve fully open or fully closed position.
- 9- Do not paint the valve. Do not expose the valve with abrasive chemicals.
- 10- Do not use any other tools for opening or closing the valve and do not remove the handle.
- 11- In case of any damage or disorder, valve should be changed by authorities.
- 12- Complying with the installation and usage instruction is compulsory. Otherwise, the product will be out of guarantee.
- 13- Do not forget to get the document of guarantee. This document is valid only with the related bill.