
## 1" Manifold with Mini Valve





TECHNICAL DATA SHEET			
Product Name	1" Manifold with Mini Valve		
Standard	TSE K 534 / TSEK		
Max. Working Temperature	120°C		
Pressure Class	PN 10		
Intended Use	Heating Systems		

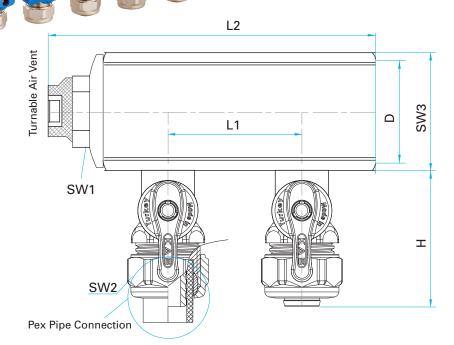

D:i	PRODUCT CODE - 1819											
Dimensions	882	883	884	885	886	887	888	889	890	891	892	893
Hole	2	3	4	5	6	7	8	9	10	11	12	13
D	1"	1"	1"	1"	1"	1"	1"	1"	1"	1"	1"	1"
L1	43	43	43	43	43	43	43	43	43	43	43	43
L2	104	147	190	233	276	319	362	405	448	491	534	577
SW1	22	22	22	22	22	22	22	22	22	22	22	22
SW2	24	24	24	24	24	24	24	24	24	24	24	24
SW3	38	38	38	38	38	38	38	38	38	38	38	38
Н	44	44	44	44	44	44	44	44	44	44	44	44





MATERIALS				
Manifold Body	Brass (CW617N)/(CW614N)			
Valve	Brass (CW617N)/(CW614N)			
Cover	Brass (CW617N)/(CW614N)			
Nut	Brass (CW617N)/(CW614N)			
Socket	Brass (CW617N)/(CW614N)			
Ring	Brass (CW617N)/(CW614N)			
Air Vent	Brass (CW617N)/(CW614N)			
Gasket - Oring	NBR /EPDM			

SURFACE SPECTS (PLATING)		
Manifold Body	Nickel + Chrome	
Valve	Nickel	
Cover	Nickel	
Nut	Nickel	

## **General Specifications:**

- 1- Ball Valve system.
- 2- Turnable Air Vent specification.
- 3- 16x2 or 17x2 Pex Pipe Connections.
- 4- 100 % leakage test for all products, while production.

## **INSTALLATION and OPERATING INSTRUCTION**

- **1-** Make sure there is no damage on the product may occur during transport and shipping. Before assembly do not unpack the product in order to prevent from the external effects.
- 2- Clean all kinds of contaminants before assembly.
- **3-** Make sure that the thread length to be connected to the manifold is not too short or too long than the thread length of the manifold.
- **4-** Install the Manifold to the system by the appropriate tools.
- 5- First, install the Nut, Ring and Socket to the hose, then screw the nut to the manifold by the appropriate tools.
- 6- Make sure the hose to be connected to the manifold is the correct size(16x2/17x2).
- 7- Observe the axiality during assembly.
- 8- The installation system that manifold connected must be protected against the freezing.
- **9-** Manifold is suitable for use in heating systems and should not be used in flammable or combustible gas/liquid installations.
- **10-** Do not paint the manifold, do not expose the manifold with abrasive chemicals, do not open or close with any other tool and do not remove the handle.