

Angle Pex-B Thermostatic Radiator Valve

KAS®



TECHNICAL DATA SHEET

Product Name	Angle Pex-B Thermostatic Radiator Valve
Standard	TS EN 215
Working Temperature	120°C
Pressure Class	PN10
Intended Use	Heating Systems
Set-Up Range Of Head	+5°C - Max:+29°C

MATERIAL SPECT


Body	BRASS(CW617N)/(CW614N)
Insert Group	BRASS(CW617N)/(CW614N)
Nuts	BRASS(CW617N)/(CW614N)
Tube	BRASS(CW617N)/(CW614N)
Pex Connection	BRASS(CW617N)/(CW614N)
Thermostatic Head	PLASTIC
Seals	NBR/EPDM

SURFACES FINISH

Body	Nickel-Plated
Nut	Nickel-Plated
Tube	Nickel-Plated

DIMENSIONS

Code	13.50.002
DN	15
D1 (thread)	1/2"
D2 (thread)	1/2"
L1 (max-min)	137 - 131
L2	54
Ø	9
SW1	30
SW2	24

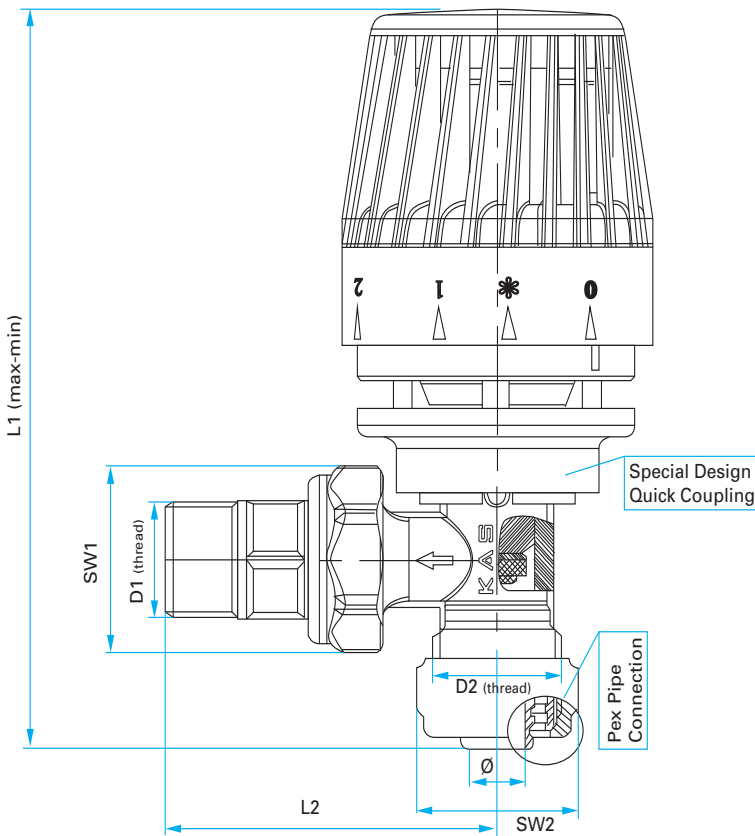



Angle Pex-B Thermostatic Radiator Valve

KAS[®]

INSTALLATION INSTRUCTION

- 1)** Make sure there is no damage on the product may occur during transport and shipping. Before assembly do not unpack the product in order to prevent from the external effects.
- 2)** Clean all kinds of contaminants before assembly.
- 3)** Make sure that the thread length to be connected to the valve is not too short or too long than the thread length of the valve.
- 4)** Keep the valve in closed position during installation. Install the valve with the appropriate tool from the side where you'll mount it.
- 5) Use enough flax or plumping adhesive.**
- 6)** Do not paint the valve, do not expose the valve with abrasive chemicals,
- 7)** Do not open or close with any other tool.
- 8)** Pay attention to on header signs by taking into account heat requirement while use valve.
- 9)** The boiler temperature must be higher than the temperature of the thermostat that is set ; otherwise, if the circulation pump is switched on, the flow sound hear from valve.
- 10)** Set cursor to Max. grade at regular intervals and tighten connection nut to fix the gap.
- 11)** The cap should be set to Max. grade during the summer months.
- 12)** The cap should be set to (*) this position during the winter months.
- 13)** (0) does not indicate close position. Not bring to this position during the winter months .
- 14)** Use filter in the installation to keep cleanly to apartment entrance
- 15)** Do not hang anything on the cap.
- 16)** The pressure balancing valves should be used in floor entrance to supply quiet working and prevent uneven flow of thermostatic radiator valve.
- 17)** To supply quiet working, the maximum pressure changing must not exceed 30-35 kPa.